


# ROOM LIGHT ASSEMBLY

## COMPONENTS

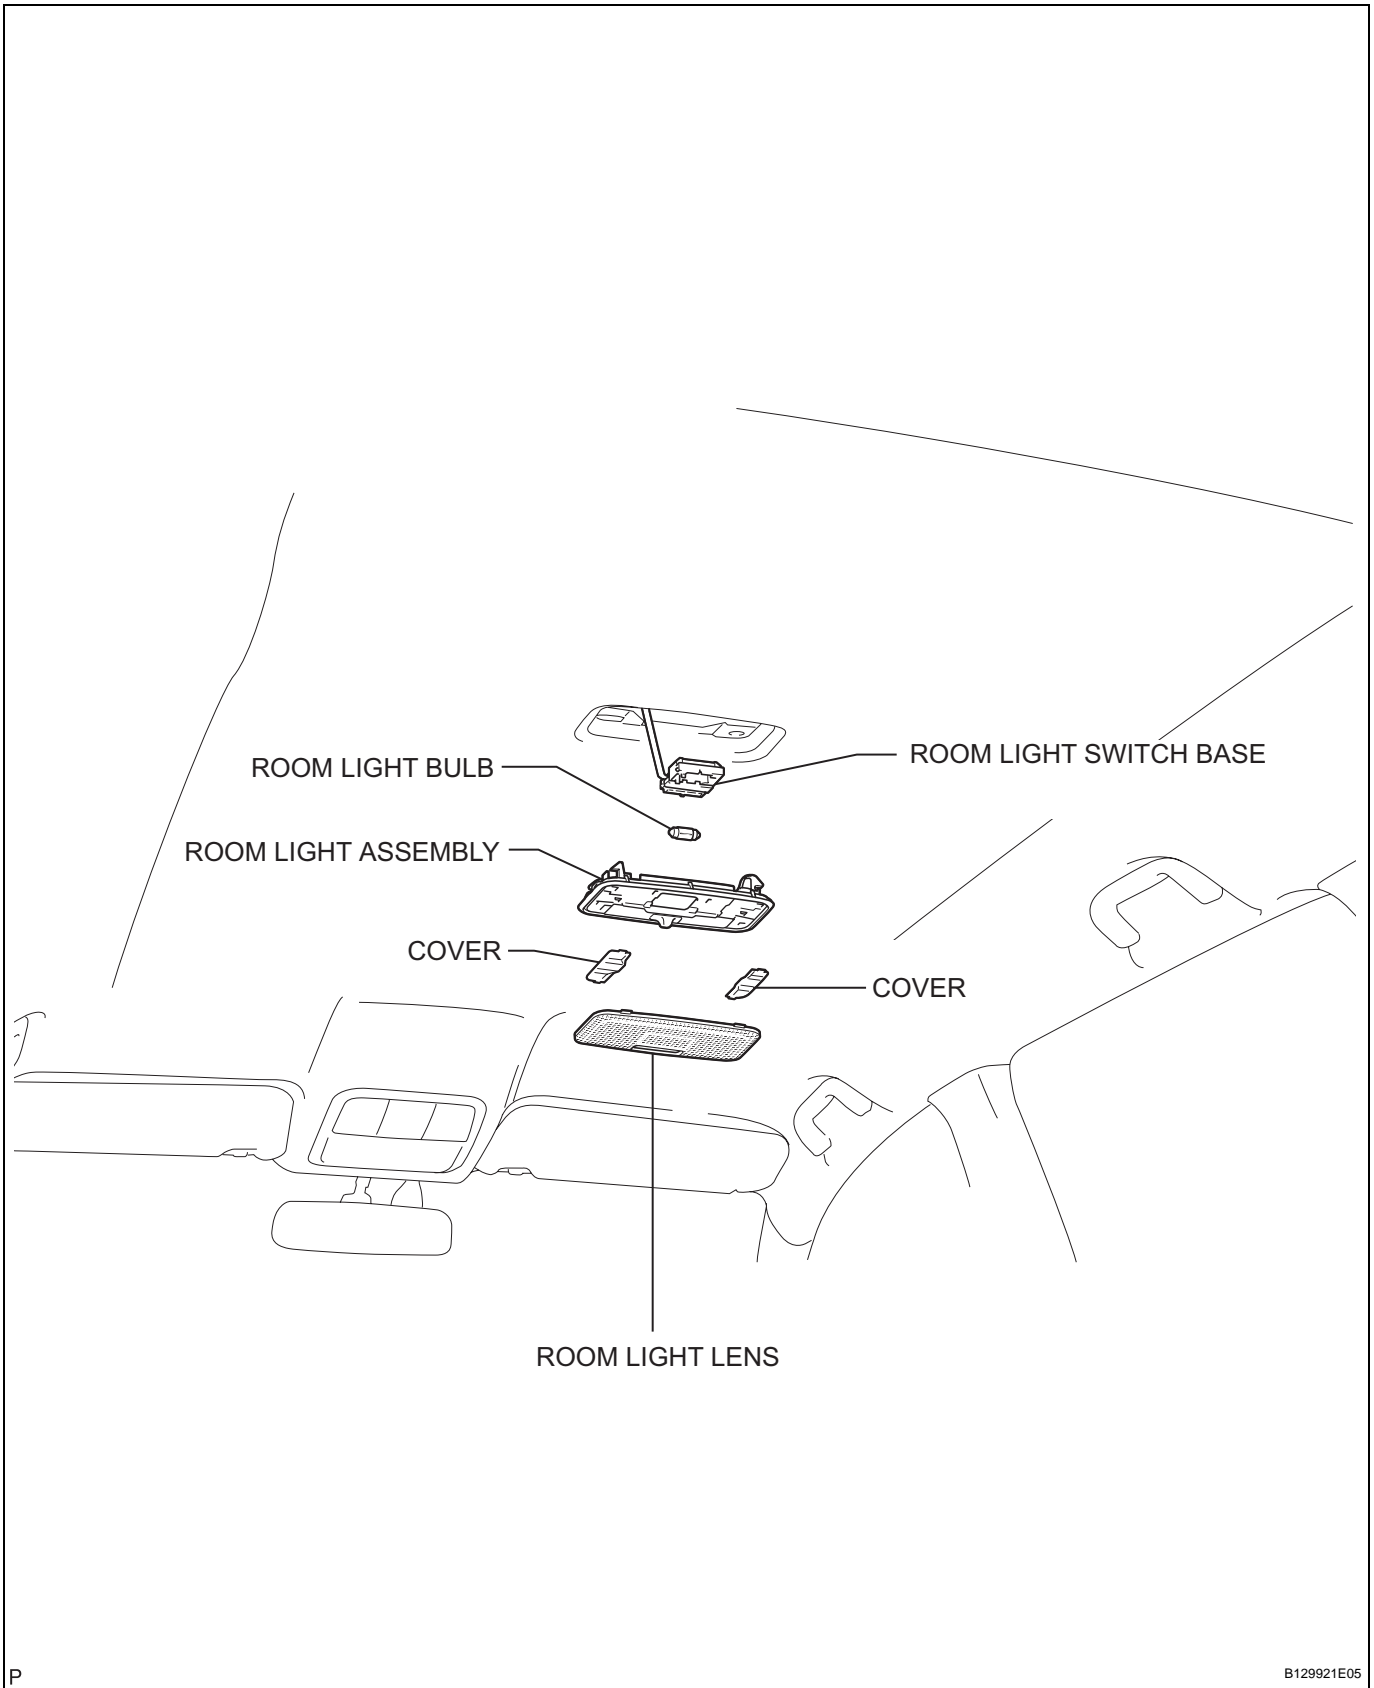

## REMOVAL

### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

### 2. REMOVE ROOM LIGHT LENS

- (a) Using a screwdriver, detach the 4 claws and remove the lens.

#### HINT:

Tape the screwdriver tip before use.

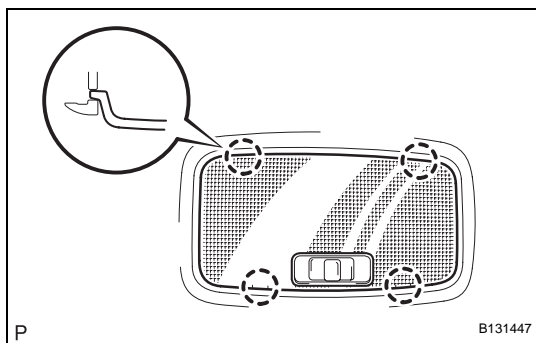


### 3. REMOVE ROOM LIGHT ASSEMBLY


- (a) Using a screwdriver, detach the 4 claws and remove the 2 covers.

#### HINT:

Tape the screwdriver tip before use.

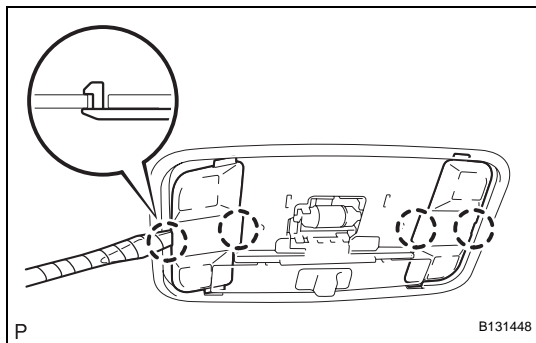


- (b) Remove the bulb from the room light switch base.

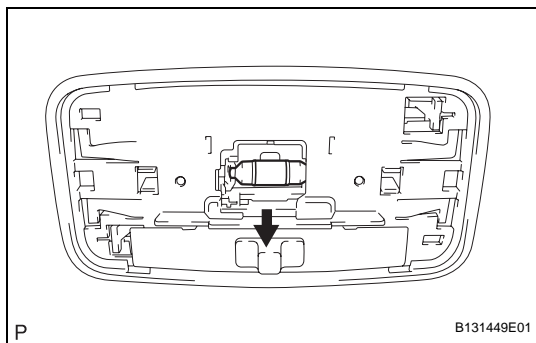


- (c) Using a screwdriver, detach the 4 claws and remove the light.

#### HINT:

Tape the screwdriver tip before use.

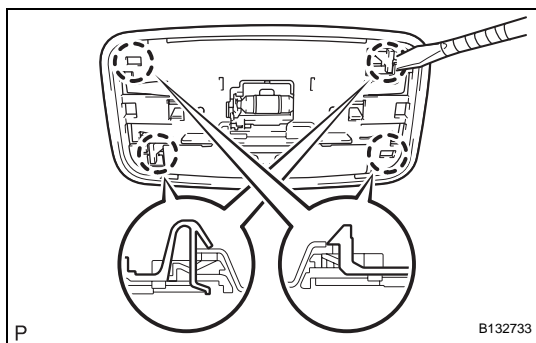


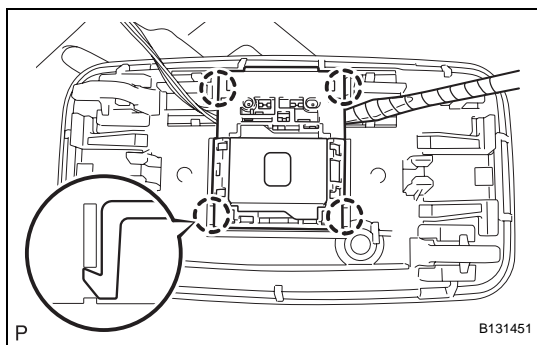

- (d) Using a screwdriver, detach the 4 claws and remove the room light switch base.

HINT:

Tape the screwdriver tip before use.

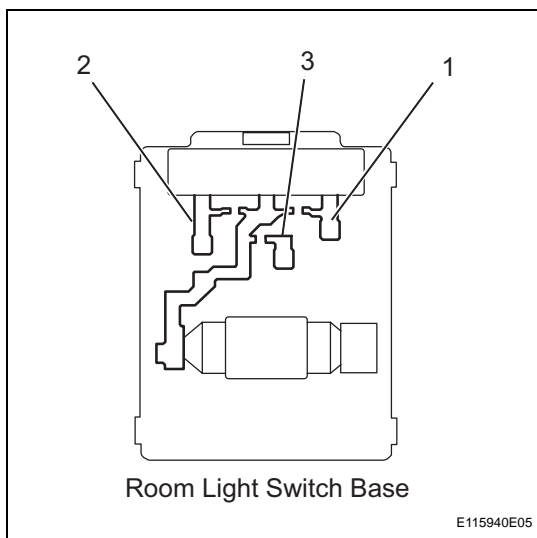

## INSPECTION

### 1. INSPECT ROOM LIGHT

- (a) Connect the battery's positive (+) lead to terminal 1 and the negative (-) lead to terminal 2, and then check that the light comes on when the switch is in the DOOR position.

**OK:**

**Light comes on.**

If the result is not as specified, replace the light assembly.

- (b) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 3, then check that the light comes on when the switch is in the ON position.

**OK:**



**Light comes on.**

If the result is not as specified, replace the light assembly.


## INSTALLATION

### 1. INSTALL ROOM LIGHT ASSEMBLY


- (a) Attach the 4 claws to install the room light switch base.

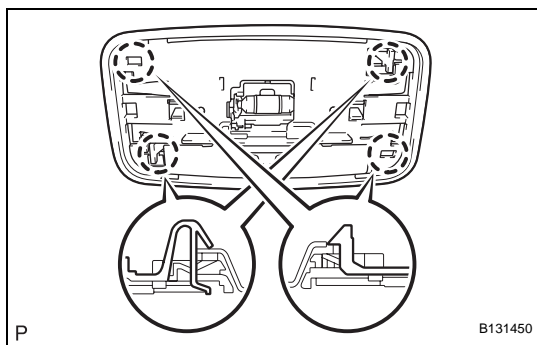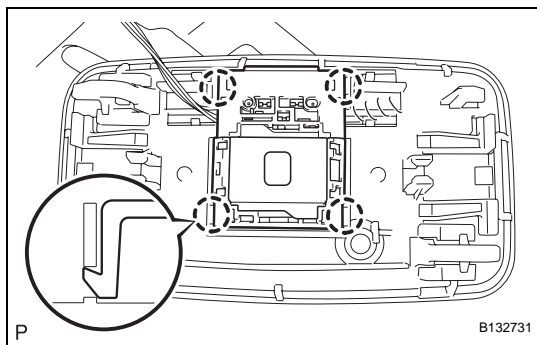


- (b) Attach the 4 claws to install the room light.

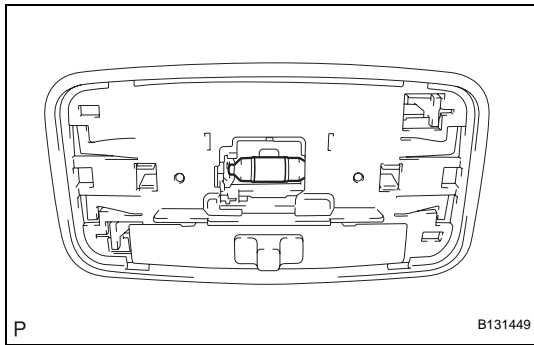

(c) Install the bulb to the room light switch base.

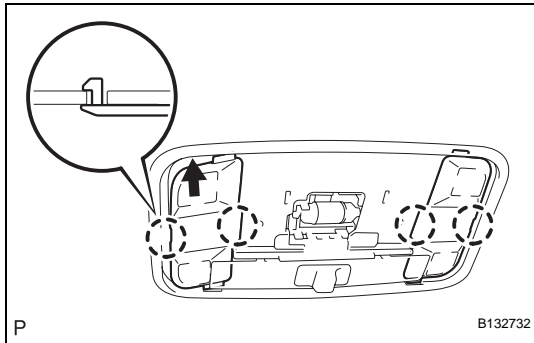

(d) Attach the 4 claws to install the 2 covers.

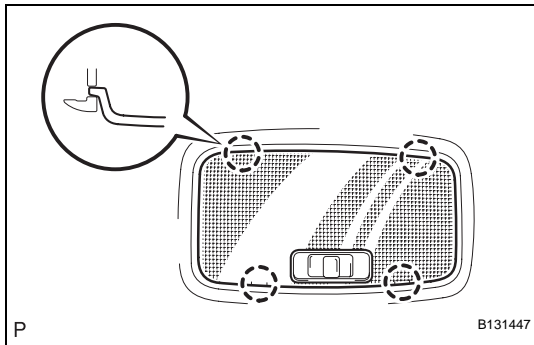

## 2. INSTALL ROOM LIGHT LENS

(a) Attach the 4 claws to install the lens.

## 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL